

Vapor Compression Distillation



DESIGN FEATURES

COMPRESSORS - Low-speed, direct drive compressors are offered on all units 1,500 GPH and above. High-speed compressors on smaller units use high-speed journal bearings for maximum life.

EVAPORATOR - The evaporator features a horizontal design using the Spray Film® process. It has a straight tube or U-tube configuration depending on size. Our process has eliminated the bottom hydraulic gasket, thus reducing maintenance.

COMPACT SIZE - Small overall dimensions allow unit to be shipped in standard shipping containers. In Addition, the horizontal design allows the unit to fit through standard industrial building hallways and doorways.


MATERIALS OF CONSTRUCTION - Standard materials used are 316 stainless steel and product contact surfaces are 25 RA. Material certifications are provided for traceability and electropolish is available.

SANITARY COMPONENTS - Stills are manufactured using sanitary valves, instruments, pumps and piping. Heat exchangers are shell and tube design using double tube-sheets.

AUTOMATION - Stills are designed to operate automatically; stopping and starting based on level signals from WFI storage tank(s). A programmable logic controller (PLC) and human machine interface (HMI) are standard on all distillers.

DEAERATOR - A 316L SST deaerator removes carbon dioxide, oxygen and other noncondensable gases from the feedwater or distillate.

INSULATION - The evaporator, deaerator, compressor, and ducting are insulated with low-chloride fiberglass and polished stainless steel lagging is available.

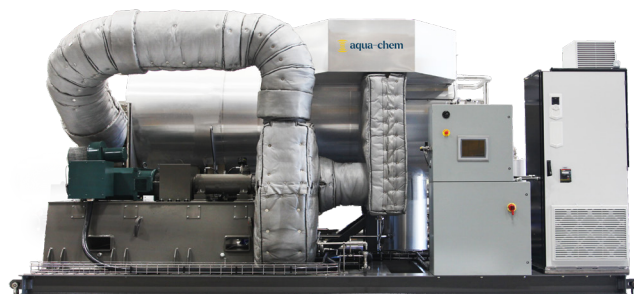


BENEFITS

- + Spray-Film® vapor compression distillation units produce consistent, reliable, high-purity Water for Beverage Manufacturers.
- + Our patented Spray-Film® evaporator design provides improved wetting of the evaporator tubes and reduced scaling. This means less downtime for cleaning and higher operating efficiency.
- + The Spray Film® design includes a built-in, on-line cleaning system for removing scale and for repassivation. The cleaning system helps reduce maintenance costs and maintain high operating efficiency.
- + All major components are accessible from floor-level, with the compressor and pumps located at the edge of the skid for easy serviceability.
- + Our design offers reduced energy consumption and less stringent feed water requirements.

HOW AQUA-CHEM SPRAY-FILM® VAPOR COMPRESSION WORKS



Incoming feedwater is preheated by the outgoing blowdown and distillate. Feedwater and recirculation water are combined and sprayed over the outside of the evaporator tubes. Start-up/makeup steam is produced in the evaporator boiler. A portion of the spray is evaporated as pure steam and the remainder is collected in the sump to be further recirculated. A small amount of the collected water is discharged as blowdown to maintain desired concentration. Steam generated inside the evaporator is drawn through the demisters by the centrifugal compressor, and the temperature is increased in the compression process. The steam condenses inside the evaporator tubes and is collected as pure distillate. The distillate is pumped through the heat exchanger and into storage.

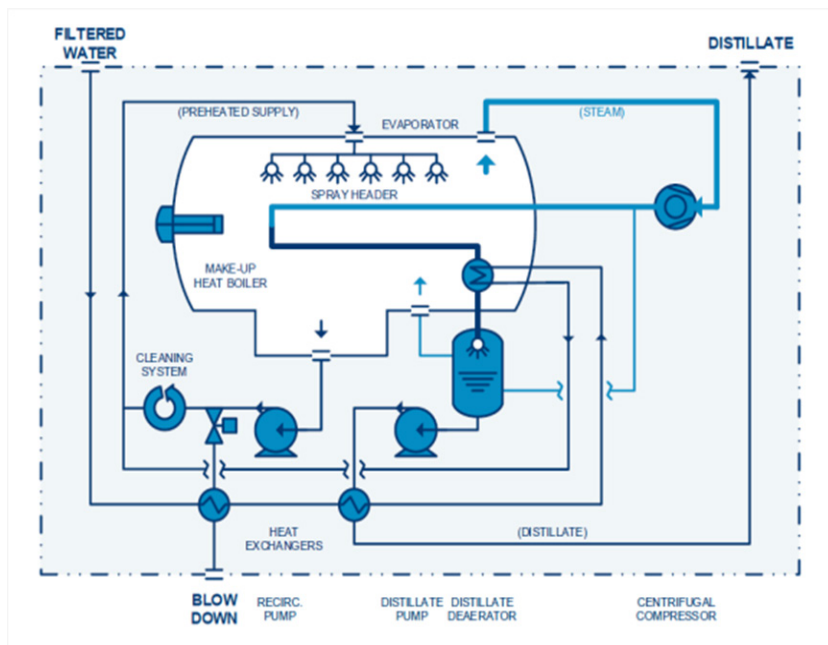

SERVICE

We provide service and support for our equipment, even decades after installation. We continue to support units that were installed in the 1970s and 1980s. We maintain inventories of key components and consumables - and ensure that our service advisors are readily available for technical support via phone or e-mail.

Model	GPH	Width (in)	Length (in)	Height (in)
BR200	200	60	65	102
BR500	600	87	151	109
BR1000	1,000	87	188	88.5
BR1500	1,500	93	250	94
BR3000	3,000	138	225	129
BR6000	6,000	147	298	156
BR9000	9,000	158	340	161

Rev. 08302022